


**WLINK**

# Quick Start Guide

---Apply to WL-ODU310 Outdoor 4G+/4G Router

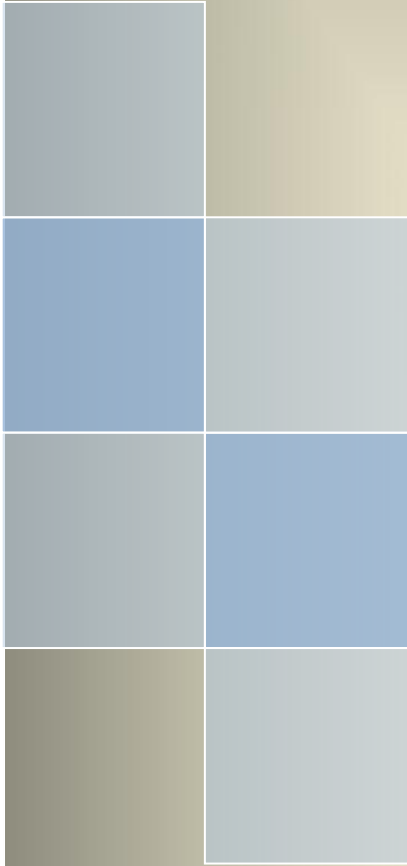

# Contents

---

Contents .....	2
Hardware Installation .....	3
Packing Contents .....	3
Antenna Installation .....	3
SIM Installation .....	3
Power on Router .....	4
Mount Kits Installation .....	5
LED Status Indication .....	5
Configuration .....	6
Login .....	6
Overview .....	7
Traffic Stats .....	7
Device List .....	8
Tool Column .....	8
Basic Network .....	11
WLAN Setting .....	14
Advanced Network Setting .....	16
VPN Tunnel .....	23

# Hardware Installation

---

## Packing Contents



Mount Kits



WL-ODU310



4G/Wi-Fi Antennas




PoE Power Adapter

## Antenna Installation



## SIM Installation

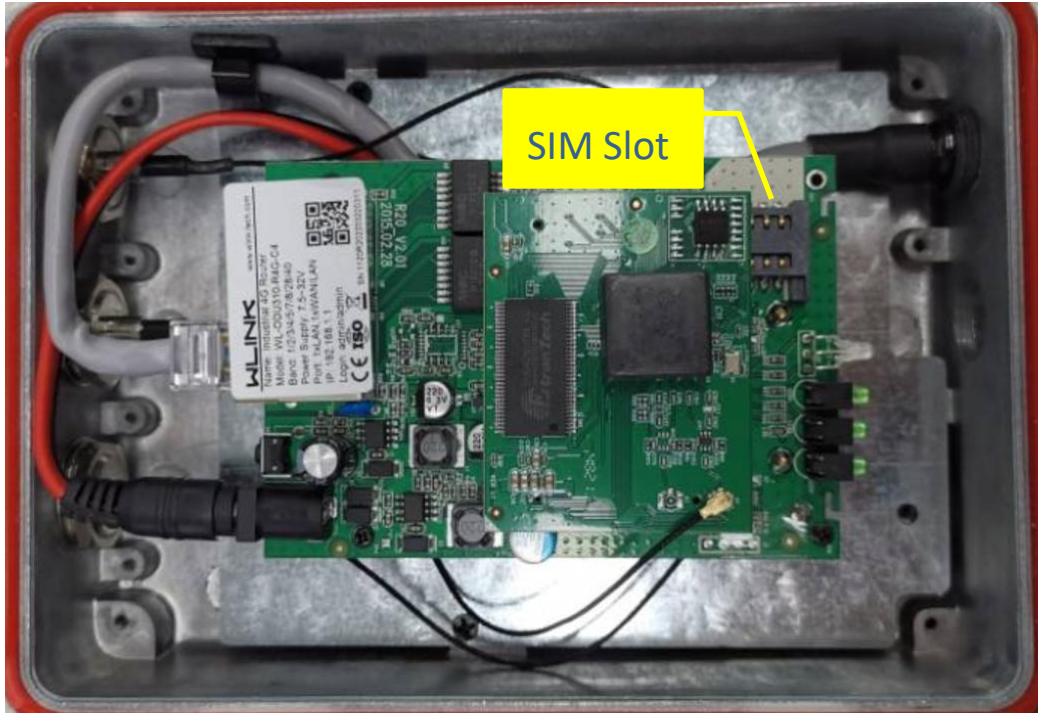

## Power on Router

Connect PoE(passive) port via RJ45 Cable between WL-ODU310 and Wlink power adapter.  
Connect LAN port of Power adapter to PC to configure the router.



## Mount Kits Installation



## LED Status Indication

silk-screen	Indicator		Note
NET	Color	Green	Good Signal
		Red	Poor Signal
	Status	Quick Blinking (0.5s)	Offline
		Slow Blinking (1.5s)	3G online
		Solid light	4G online

# Configuration

## Login

To access and configure certain features of the WL-ODU310, one needs to log in to the WL-ODU310. Connect one Ethernet cable to PoE interface of device and PoE adapter, and connect other Ethernet cable between LAN of PoE adapter and PC.

Click “start > control panel”, find “Network Connections” icon and double click it to enter, select “Local Area Connection” corresponding to the network card on this page. Refer to the figure below.


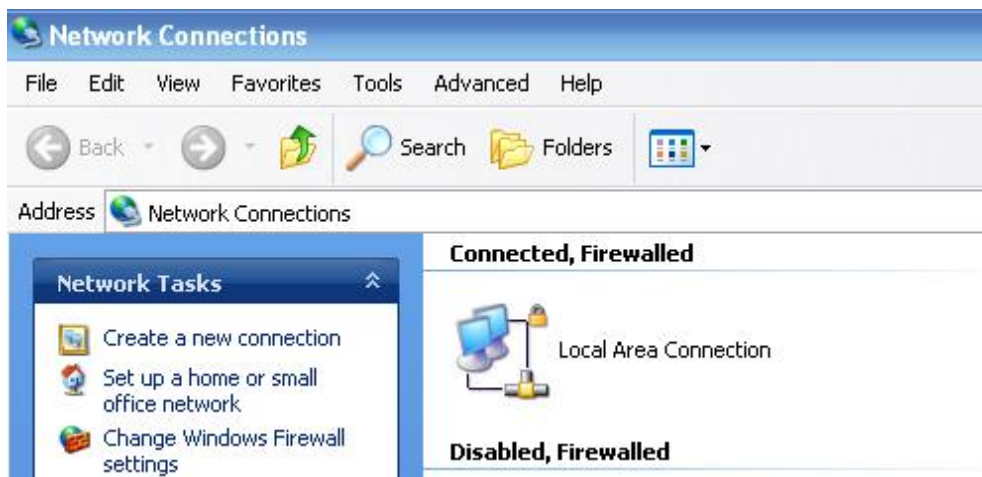


Figure 2-1 Network Connection

- Step 2 Obtain a IP address automatically or set up IP address,192.168.1.xxx(XXX can be any number between 2~254)
- Step 3 .Enter the default IP Address as <http://192.168.1.1> the login page will open as shown in the figure below.

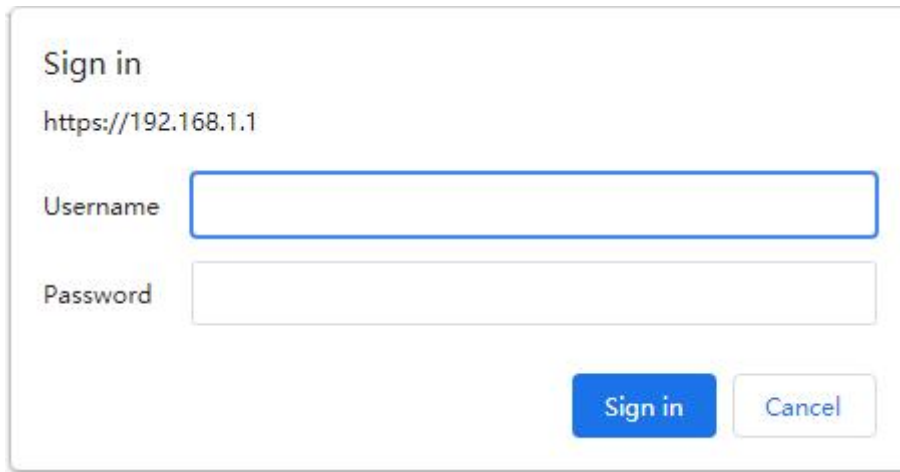

User name: admin  
 Password: admin

## Overview

The overview GUI will display router system information, Ethernet ports status, VPN connection status, LAN information, 4G connection information and WLAN information.

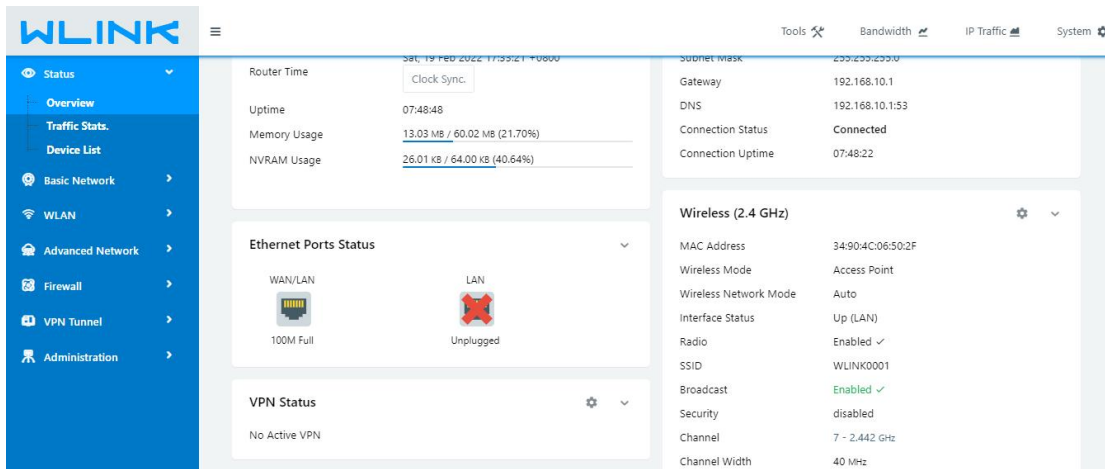


Figure 2-2 Router Status GUI

## Traffic Stats.

Click Status->Traffic Stats. to enter the traffic stats.GUI.to check Cellular/WAN traffic in real-time.

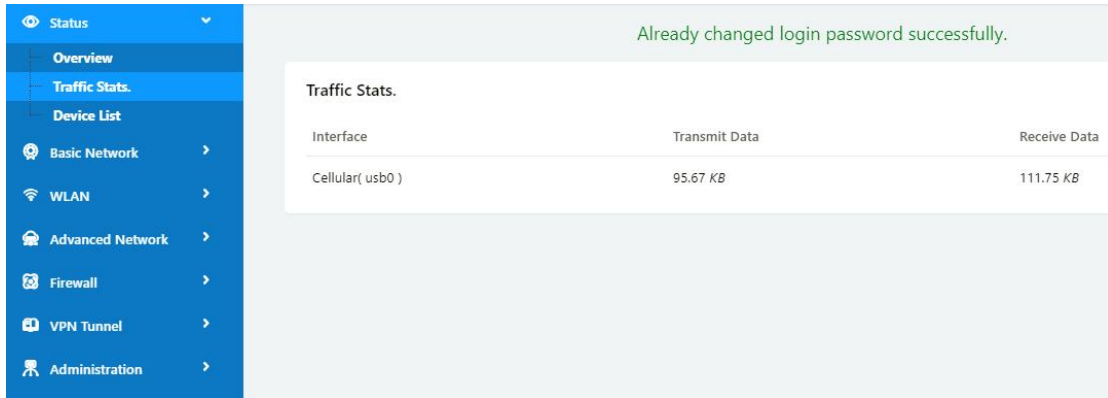


Figure 2-3 Traffic Stats. GUI

## Device List

Click Status->Device List to enter the device list GUI.to check the connected devices information in the list.

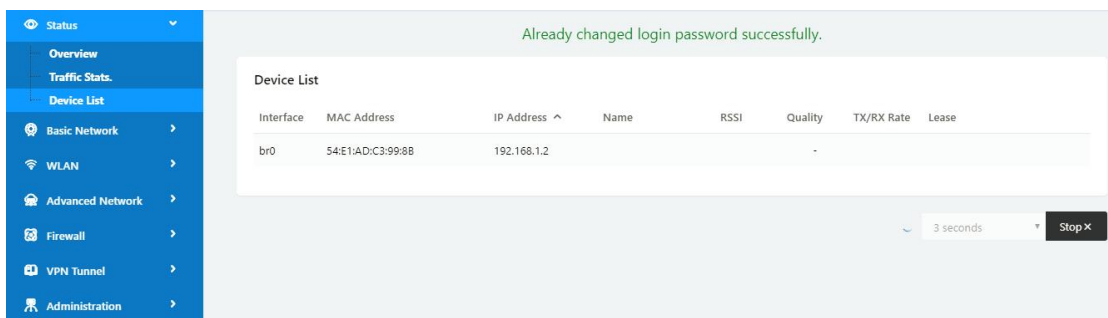


Figure 2-4 Device List GUI

## Tool Column



Figure 2-5 Tool Column GUI

## Ping

Click Tools->Ping to enter ping test GUI. Used to test the reachability of a host on an Internet IP network and to measure the round-trip time for messages sent from the originating host to a destination server.

**Ping**

IP Address:

Ping Count:

Packet Size:  (bytes)

Seq	Address	RX Bytes	TTL	RTT (ms)	+/- (ms)
-----	---------	----------	-----	----------	----------

## Trace

Click Tools->Trace to enter trace test GUI. diagnostic tool for displaying the route and measuring transit delays of packets across an Internet IP network.

**Trace Route**

IP Address:

Maximum Hops:

Maximum Wait Time:  (seconds per hop)

Hop	Address	min (ms)	max (ms)	avg (ms)	+/- (ms)
-----	---------	----------	----------	----------	----------

## Log

Click Tools-> Log to enter Log GUI. Use to check logs in GUI, download GUI and send logs to server.

**Logs**


View

Download Log File

» Logging Configuration


## Capture

Click Tools-> Capture to enter capture data GUI. Use to capture LAN/WAN data packet to analyse what happen in the router.

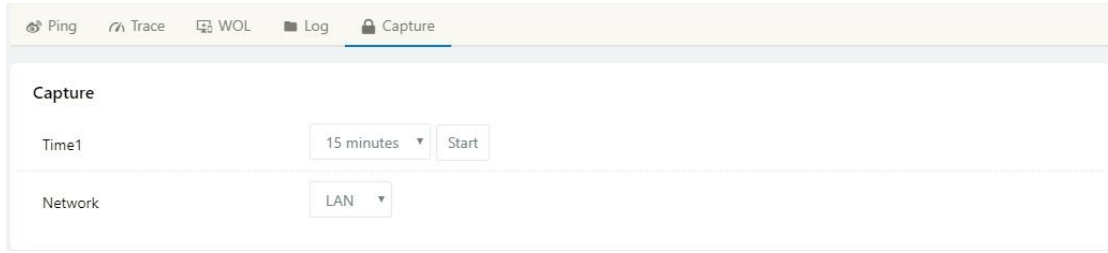


## Bandwidth

Click Bandwidth to enter bandwidth graphic GUI. Used to check cellular/LAN/Wi-Fi real-time bandwidth.

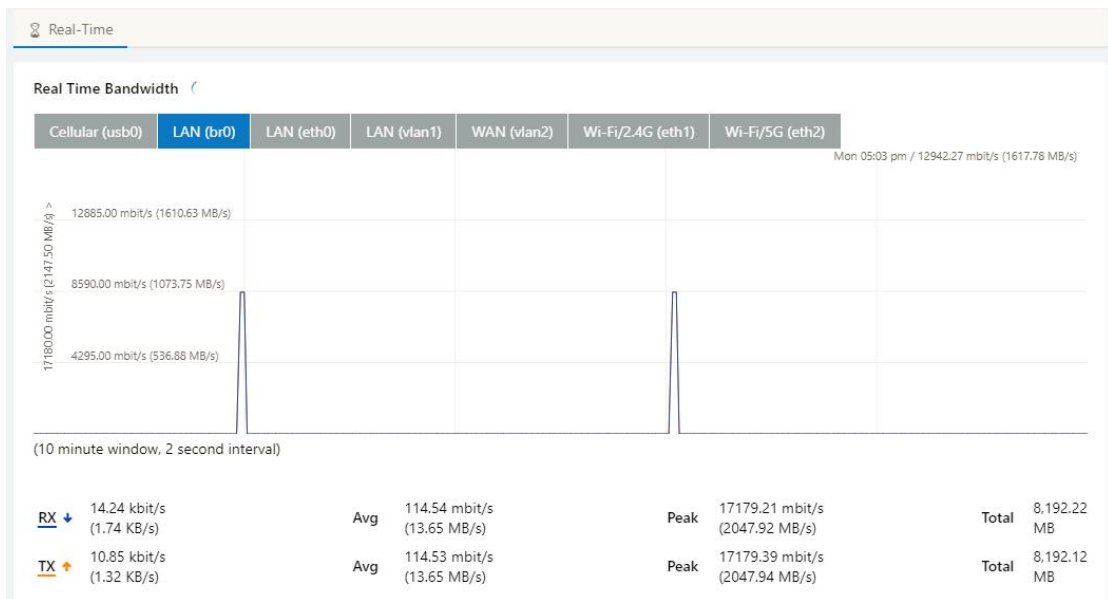

## System

Click system to choose software reboot, hardware reboot and logout GUI.

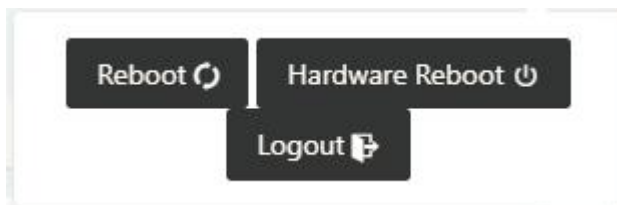

# Basic Network

## Cellular Setting

Step 1 Basic Network-> Cellular, you can modify relevant parameter according to the application.

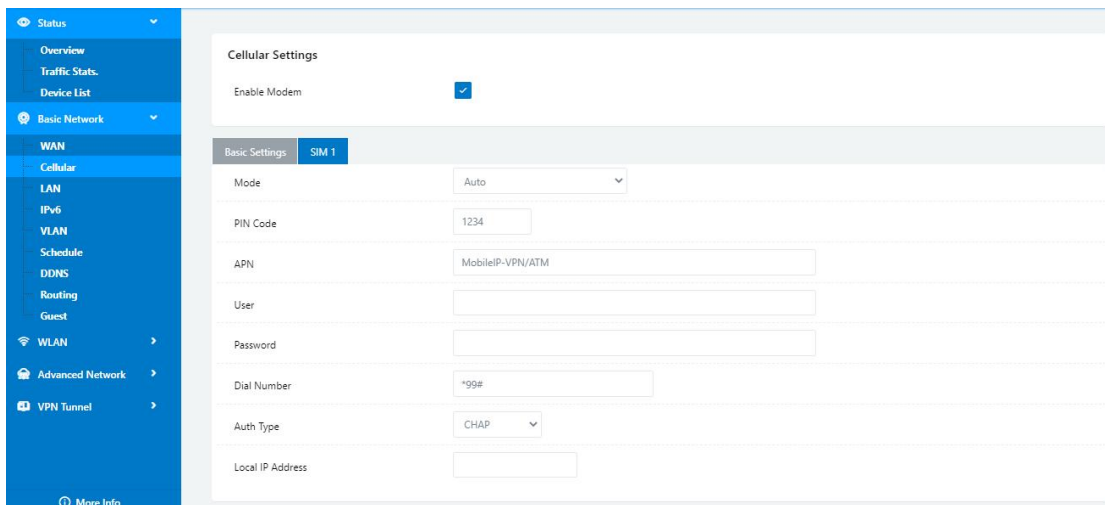
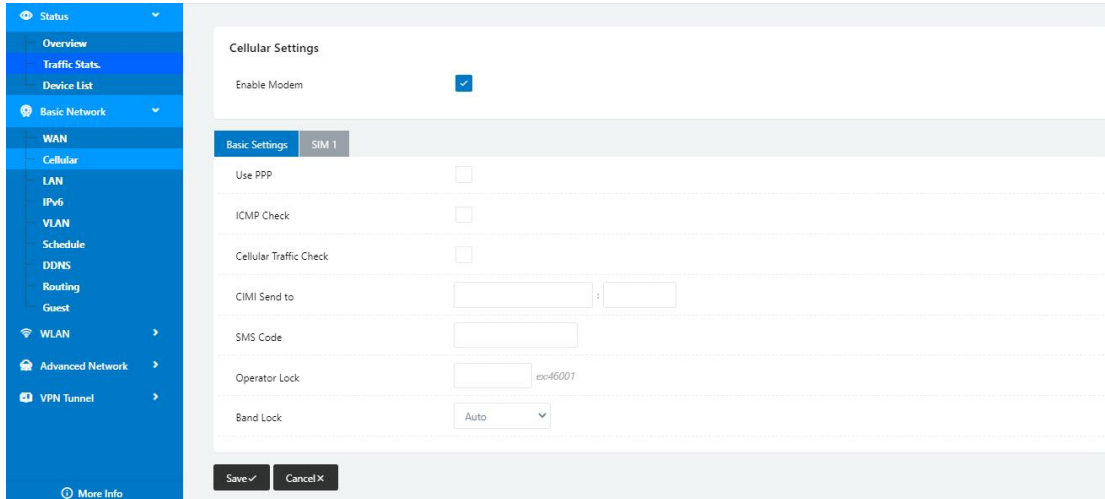


Table 2-1 Cellular Setting Instruction

Parameter	Instruction
Enable Modem	Enable/Disable 4G mode.
Use PPP	ECM dialup as default. PPP optional.
ICMP check	If enable ICMP check and setup a reachable IP address as destination IP, the router will reconnect/reboot once ICMP check failed.

Parameter	Instruction
Cellular Traffic Check	The router will reconnect/reboot once there's no Rx/Tx data.
CIMI Send to	Send CIMI to a defined IP and port by TCP protocol.
SMS Code	Remote control the router by SMS. Only the configured SMS code will work.
Operator Lock	Lock a specified operator for the router by MCC/MNC code.
Connect Mode	<p><b>【Auto】</b> The router will automatically connect to 3G/4G networks and give priority to 4G.</p> <p><b>【LTE】</b> Router will connect to 4G only.</p> <p><b>【3G】</b> Router will connect to 3G only.</p>
Pin Code	Some SIM cards are locked with a Personal Identification Number (PIN) code in case they are lost or stolen.
APN	APN is provided by local ISP, usually CDMA/EVDO networks do not need this parameter.
User	SIM card user name is provided by ISP
Password	SIM card password is provided by ISP
Auth. Type	Auto/PAP/Chap/MS-Chap/MS-Chapv2 authentication optional.
SIM Local IP Address	Fix SIM IP. The feature is available if carrier can provide this service.

Step 2 After Setting, please click “save” icon.

----End

## LAN Setting

Step 1 Basic Network>LAN to enter below interface

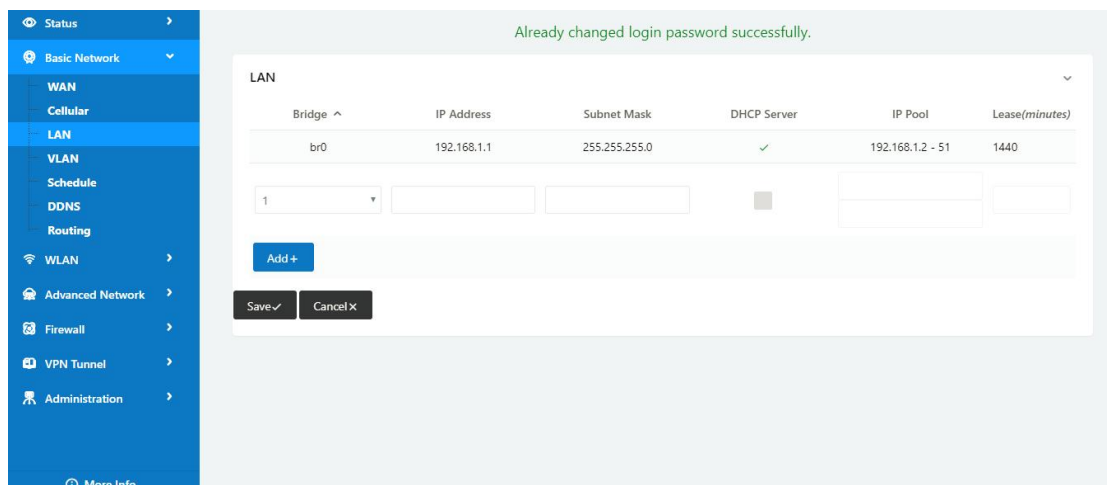


Table 2-2 LAN Setting Instruction

Parameter	Instruction
Bridge	Supports 4 LAN IP address for br0 to br3 interface. If need to support VLAN, please go to VLAN GUI.
Router IP Address	Router IP address, default IP is 192.168.1.1
Subnet Mask	Router subnet mask, default mask is 255.255.255.0
DHCP	Dynamic allocation IP service, after enable, it will show the IP address range and options of lease
IP Pool	IP address range within LAN
Lease	The valid time, unit as minute
Add	Add LAN IP address, supports 4 LAN IP addresses.

Step 2 After setting, please click “save” to finish, the device will reboot.

----End

## Dynamic DNS Setting

Step 1 Basic Network->DDNS to enter the DDNS setting page.

**Dynamic DNS** ▼

IP Address

Auto refresh every  minutes (0 = Disabled)

**Dynamic DNS1** ▼

Service

**Dynamic DNS2** ▼

Service

Table 2-3 DDNS Setting Instruction

parameter	Instruction
IP address	Default is standard DDNS protocol, for customized protocol, please contact Wlink engineer. Usually, use default IP 0.0.0.0
Auto refresh time	Set the interval of the DDNS client obtains new IP, suggest 240s or above
Service provider	Select the DDNS service provider that listed.

Step 2 Please Click "Save" to finish.

----End

## WLAN Setting

It's mainly for router which support Wi-Fi, you can modify and configure WLAN parameter through Web GUI, below is the common setting.

### Basic Setting

Step 1 WLAN->Basic Setting to configure relative parameter

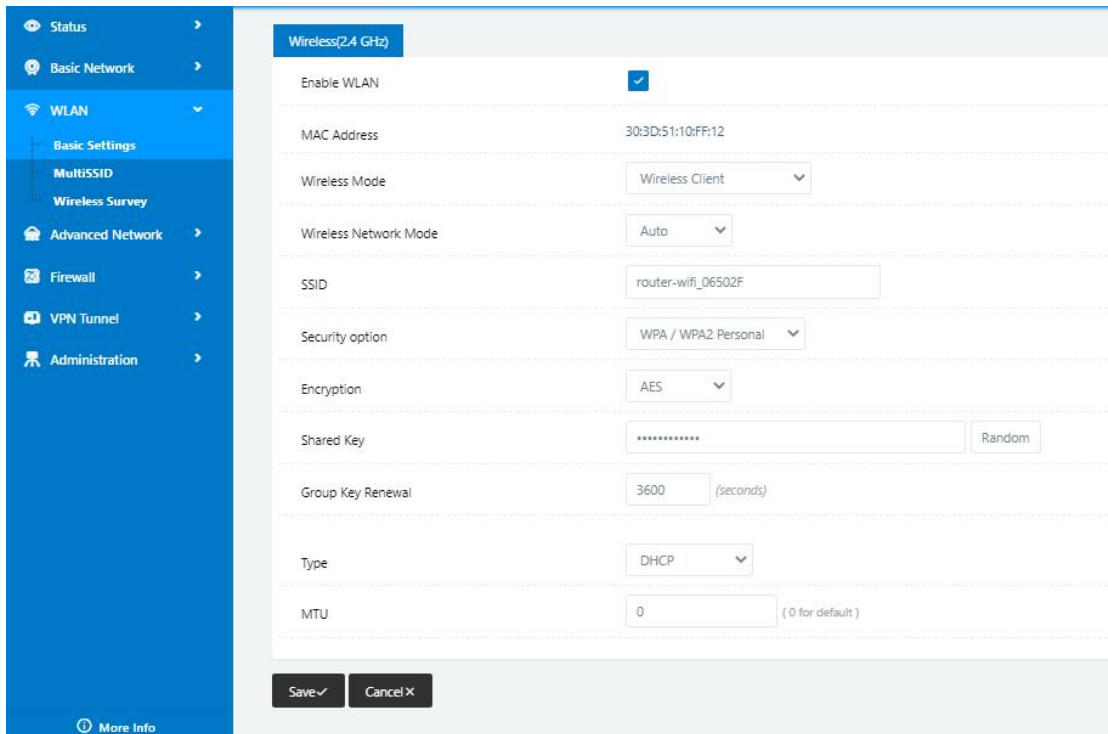


Table 2-4 Basic of WLAN Setting Instruction


Parameter	Instruction
Enable wireless	Enable or Disable the Wireless
Wireless mode	Support AP mode.
Wireless Network protocol	Support Auto/b/g/n optional for 2.4G.
SSID	The default is router, can be modified as per application.
Channel	The channel of wireless network, suggest keep the default
Channel Width	20MHz and 40MHz alternative for 2.4G. 20MHz, 40MHz and 80MHz alternative for 2.4G.
Security	Support various encryption method as requested.

Step 2 Please click “Save” to finish.

----End

## MultiSSID

Step 4 WLAN->MultiSSID Setting to configure relative parameter

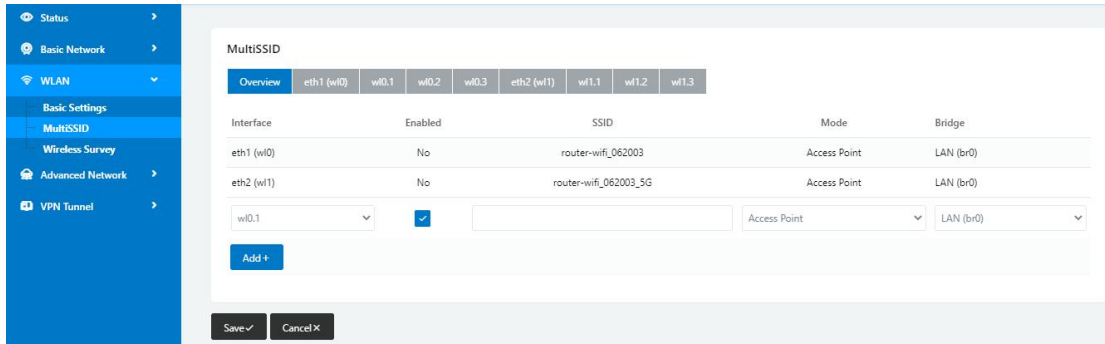


Step 1 Please click “Save” to finish.

----End

## Wireless Survey

Step 1 WLAN> Wireless Survey to check survey.

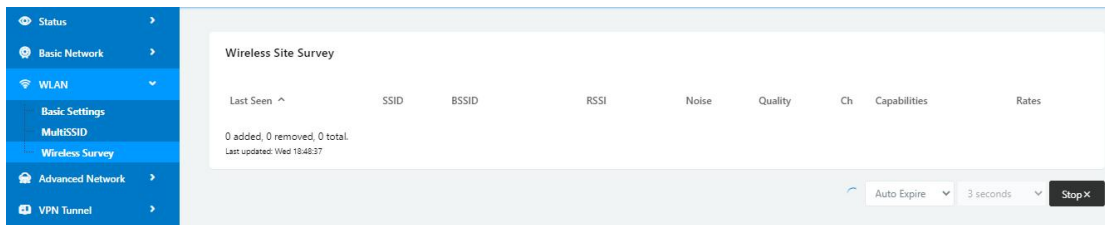

## Advanced Network Setting

### Port Forwarding

Step 1 Advanced Network > Port Forwarding to enter the GUI, you may modify the router name, Host name and Domain name according to the application requirement.

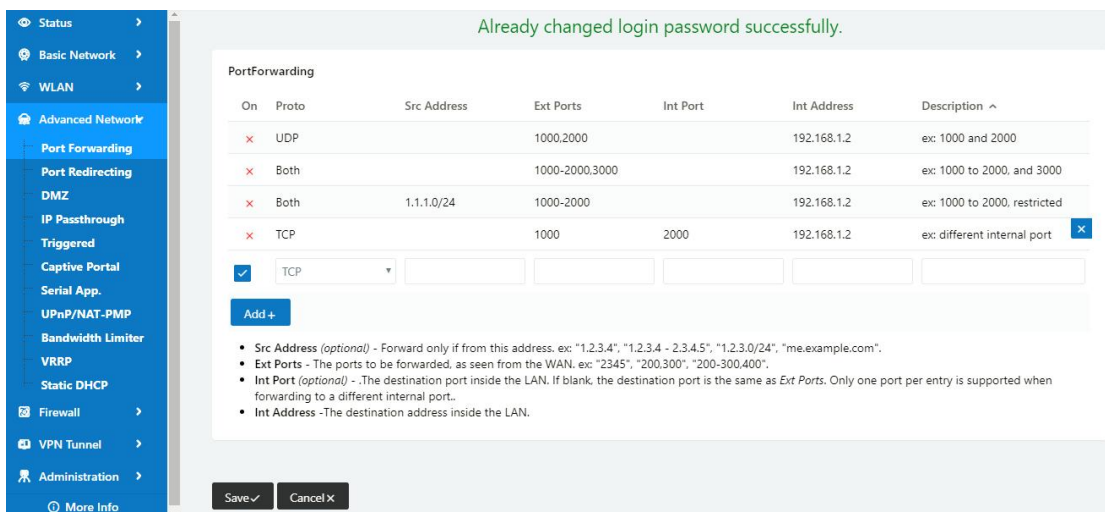


Table 2-5 Port Forwarding Instruction

Parameter	Instruction
Protocol	Support UDP, TCP, both UDP and TCP
Src. Address	Source IP address. Forward only if from this address.
Ext. Ports	External ports. The ports to be forwarded, as seen from the WAN.
Int. Port	Internal port. The destination port inside the LAN. If blank, the destination port is the same as Ext Ports. Only one port per entry is supported when forwarding to a different internal port.
Int. Address	Internal Address. The destination address inside the LAN.
Description	Remark the rule

Step 2 Please click "save" to finish

----End

## DMZ Setting

Step 1 Advanced Network> DMZ to check or modify the relevant parameter.

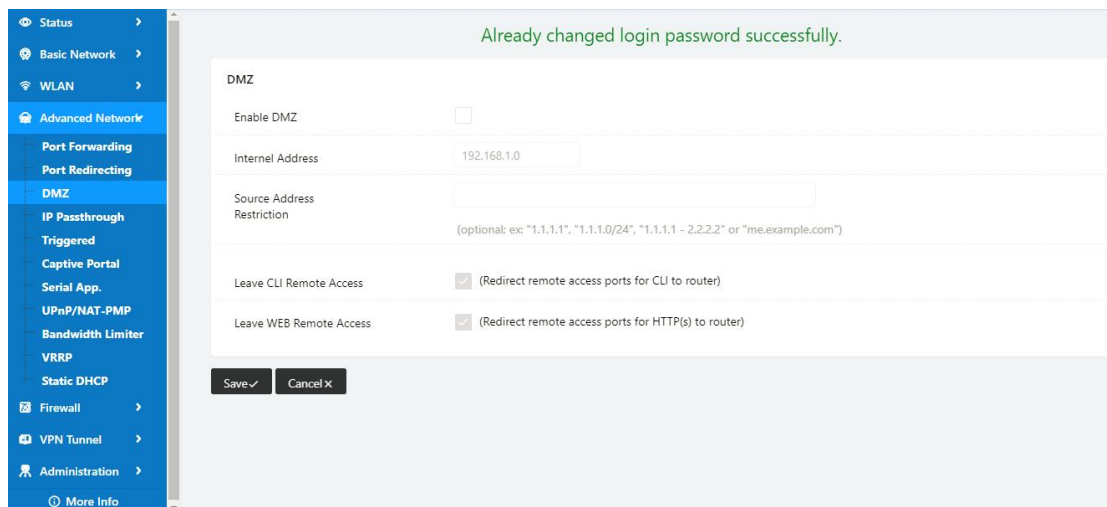


Table 2-6 DMZ Instruction

parameter	Instruction
Destination Address	The destination address inside the LAN.
Source Address Restriction	If no IP address inside, it will allow all IP address to access. If define IP address, it will just allow the defined IP address to access.
Leave Remote Access	

Step 2 Please click "save" to finish

----End

## IP Passthrough Setting

Step 1 Advanced Network> IP Passthrough to check or modify the relevant parameter.

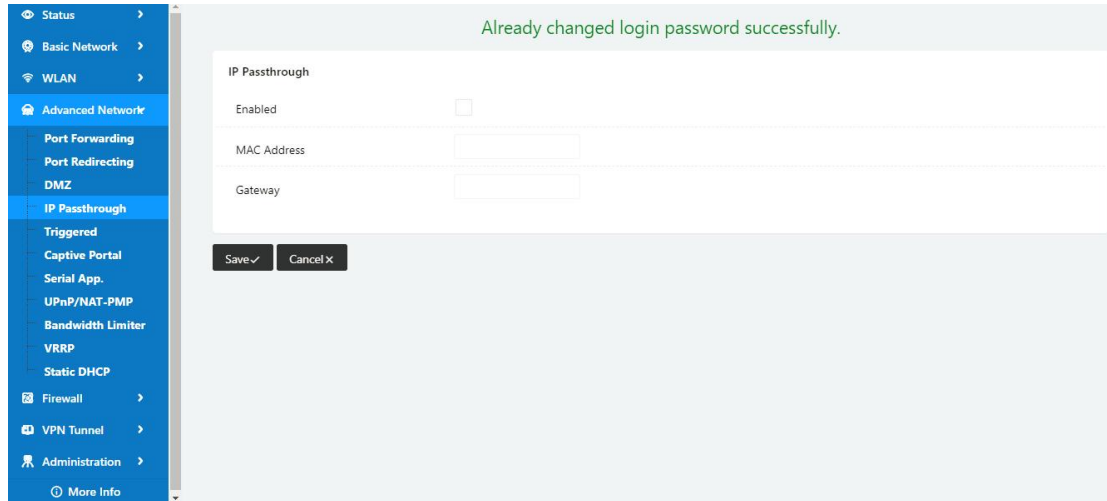


Table 2-7 IP Passthrough Instruction

parameter	Instruction
Enable	Enable IP Passthrough
MAC Address	Enable DHCP of device. Configure device Mac. Device will be assigned SIM IP.
Gateway	If WL-G200 connect to multiple device, input other device gateway. The device might access to router GUI.

Step 2 Please click "save" to finish

----End

## Triggered Setting

Step 1 Advanced Network> Triggered to check or modify the relevant parameter.

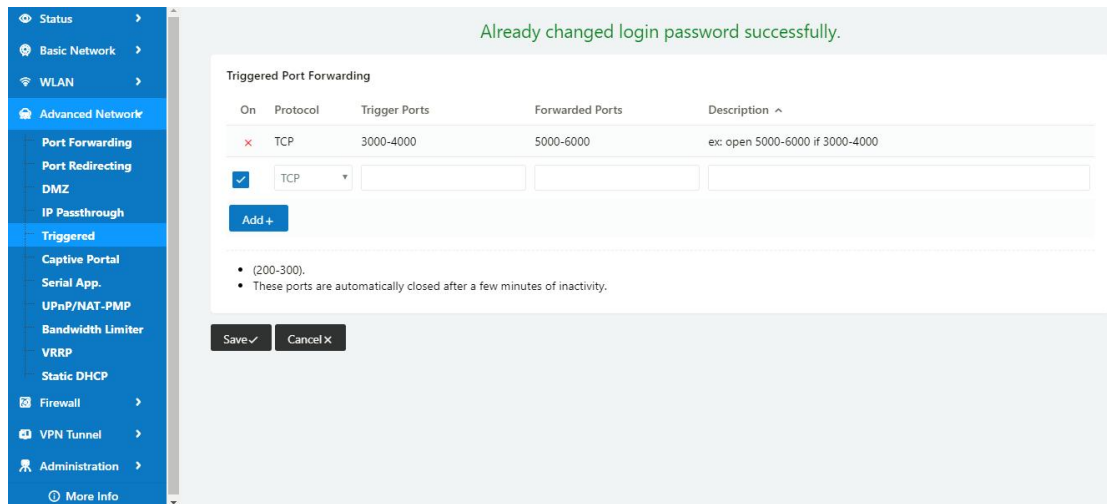


Table 2-8 Triggered Instruction

parameter	Instruction
Protocol	Support UDP, TCP, both UDP and TCP
Triggered Ports	Trigger Ports are the initial LAN to WAN "trigger".
Transferred Ports	Forwarded Ports are the WAN to LAN ports that are opened if the "trigger" is activated.
Note	Port triggering opens an incoming port when your computer is using a specified outgoing port for specific traffic.

Step 2 Please click "save" to finish.

----End

## Captive Portal

Step 1 Advanced Network> Triggered to check or modify the relevant parameter.

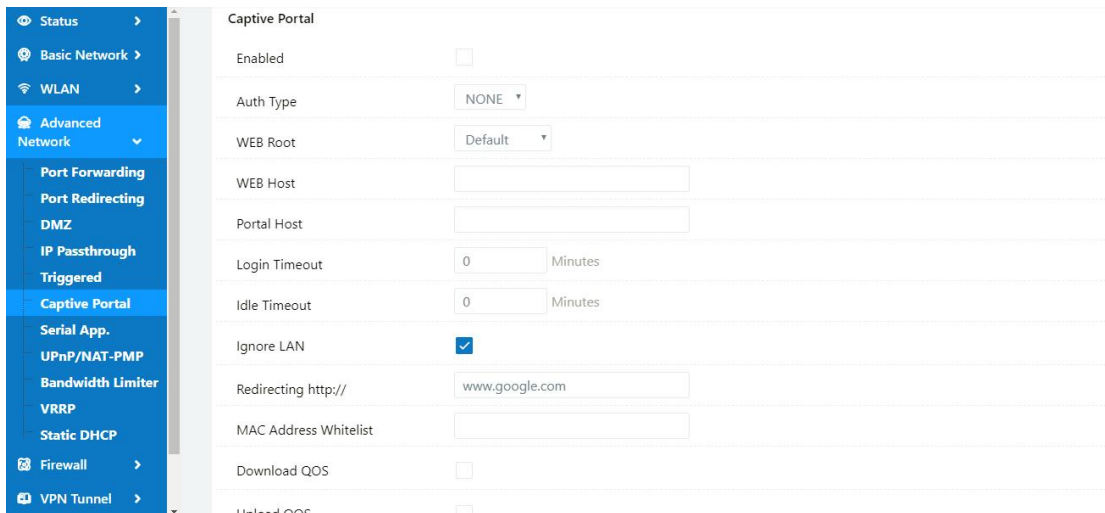


Table 2-9 Captive Portal Instruction


Parameter	Instruction
Enable	Enable Captive portal feature.
Auth Type	Reserved.
Web Root	Choose captive portal file storage path. Default: Captive portal file is in the firmware as default. In-storage: Captive portal file is in router's Flash. Ex-storage: Captive portal file is in extended storage such as SD card.
Web Host	Configure domain name for the captive portal access. For example, Configure as wlink.tech.com, we might directly access to captive portal page in the website as wlink.tech.com
Portal Host	Reserved.
Logged Timeout	Maximum time user has connectivity. User need to re-login Captive Portal page after defined time.
Idle Timeout	Maximum time user has connectivity if no network activity from Wi-Fi User.If User need to re-login Captive page to surf internet.
Ignore LAN	If enabled, LAN devices will bypass the Captive Portal page.
Redirecting	Router will redirect to the defined link after accepting the terms and conditions on the Captive Portal page.
MAC Whitelist	No captive portal page for Wi-Fi device.
Download QoS	Enable to apply the Download and Upload per user limits.
Upload QoS	Maximum download speed available to each user.

Step 2 Please click "save" to finish.

----End

## UPnP/NAT-PMP Setting

Step 1 Advanced Network> Upnp/NAT-PMP to check or modify the relevant parameter.

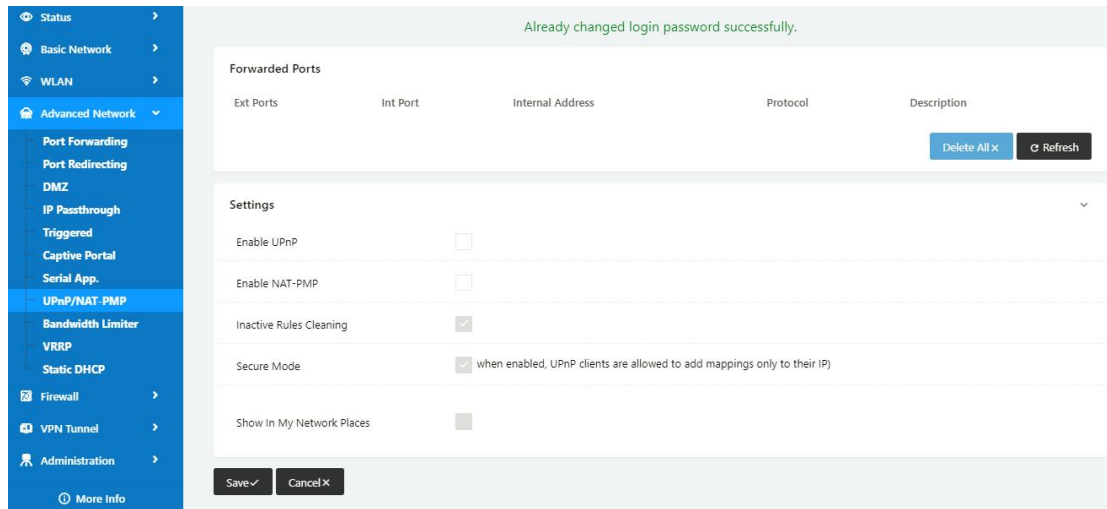

Step 2 Please click "save" to finish.

----End

## Bandwidth Control Setting

Step 1 Advanced Network> Bandwidth Control to check or modify the relevant parameter.

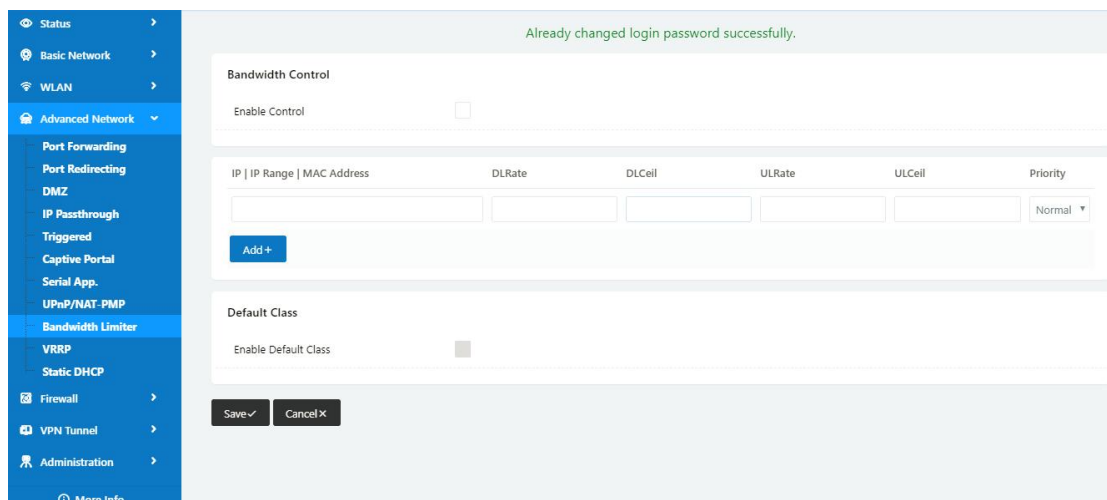


Table 2-10 Bandwidth Control Instruction

Max Available Download	Speed limit for router.
Max Available Upload	Speed limit for router.

IP/ IP Range/ MAC Address	Limit devices speed for specified IP/IP Range/ MAC Address.
DL Rate	Mix Download rate
DL ceil	Max download rate
UL Rate	Mix Upload rate
UL ceil	Max upload rate
Priority	The priority of a specific user.
Default Class	If no specified IP/MAC, the download and upload limit for total speed for all of device.

Step 2 Please click "save" to finish.

----End

## VRRP Setting

Step 1 Advanced Network> VRRP to check or modify the relevant parameter.

Already changed login password successfully.

VRRP

Enable VRRP

Mode

Virtual IP

Virtual Router ID

Priority

Authentication

Script Type

Check Interval

Weight


Save ✓ Cancel ✕

Step 2 Please click "save" to finish.

----End

## Static DHCP Setting

Step 1 Advanced Network> Static DHCP to check or modify the relevant parameter.

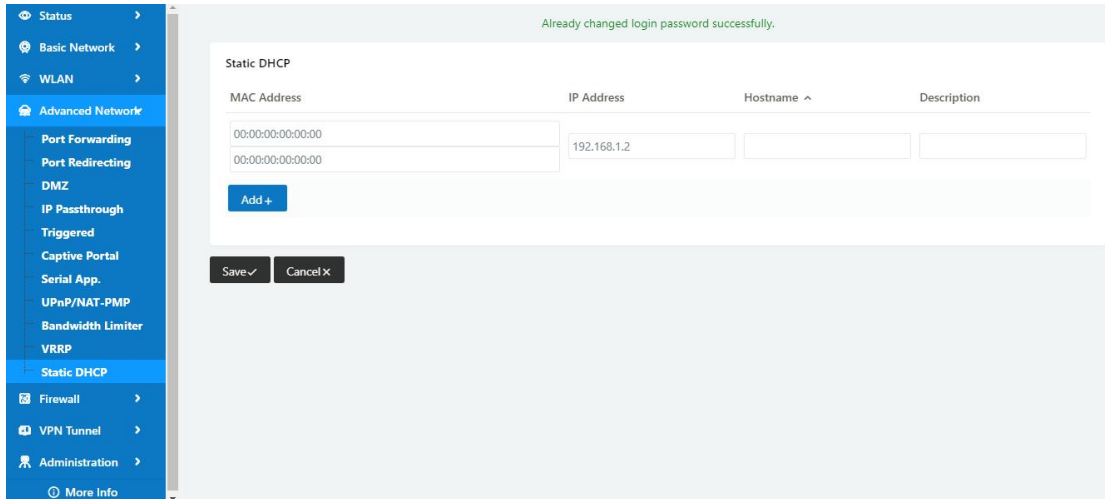

Step 2 Please click "save" to finish.

----End

## VPN Tunnel

### GRE Setting

Step 1 VPN Tunnel> GRE to check or modify the relevant parameter.

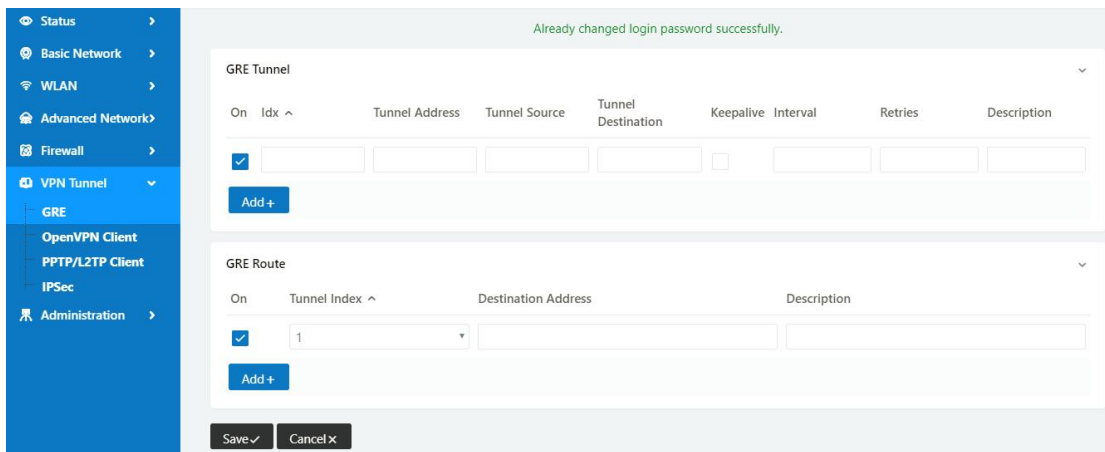


Table 2-11 GRE Instruction

Parameter	Instruction
IDx	GRE tunnel number
Tunnel Address	GRE Tunnel local IP address which is a virtual IP address.
Tunnel Source	Router's 3G/WAN IP address.
Tunnel Destination	GRE Remote IP address. Usually a public IP address

Parameter	Instruction
Keep alive	GRE tunnel keep alive to keep GRE tunnel connection.
Interval	Keep alive interval time.
Retries	Keep alive retry times. After retry times, GRE tunnel will be re-established.
Description	

Step 2 Please click "save" to finish.

----End

## OpenVPN Client Setting

Step 1 VPN Tunnel> OpenVPN Client to check or modify the relevant parameter.

The screenshot displays the configuration page for an OpenVPN Client. The interface includes a left-hand navigation menu with categories like Basic Network, WLAN, Advanced Network, Firewall, VPN Tunnel, GRE, OpenVPN Client, PPTP/L2TP Client, IPsec, and Administration. The 'OpenVPN Client' section is active, showing two client tabs: 'Client 1' and 'Client 2'. Below the tabs are sub-sections for 'Basic', 'Advanced', 'Keys', and 'Status'. The 'Basic' tab is selected, showing the configuration for 'VPN Client #1 (Stopped)'. The settings are as follows:

- Start with WAN:
- Interface Type: TUN
- Protocol: UDP
- Server Address: 1194
- Firewall: Automatic
- Authorization Mode: TLS
- Username/Password Authentication:
- HMAC authorization: Disabled
- Create NAT on tunnel:

A 'Start Now' button is located at the bottom of the configuration area.

### OpenVPN Client

Client 1
Client 2

Basic
Advanced
Keys
Status

**VPN Client #1 (Stopped)**

Start with WAN

Interface Type TUN ▼

Protocol UDP ▼

Server Address 1194

Firewall Automatic ▼

Authorization Mode TLS ▼

Username/Password Authentication

HMAC authorization Disabled ▼

Create NAT on tunnel

Start Now

Save ✓
Cancel ✕

Table 2-12 Basic of OpenVPN Instruction

Parameter	Instruction
Start with WAN	Enable the Openvpn feature for 4G/3G/WAN port.
Interface Type	Tap and Tun type are optional. Tap is for bridge mode and Tunnel is for routing mode.
Protocol	UDP and TCP optional.
Server Address	The Openvpn server public IP address and port.
Firewall	Auto, External only and Custom are optional
Authorization Mode	TLS, Static key and Custom are optional.
User name/Password	As the configuration requested.

Parameter	Instruction
Authentication	
HMAC authorization	As the configuration requested.
Create NAT on tunnel	Configure NAT in Openvpn tunnel.

Basic **Advanced** Keys Status

VPN Client #1 (Stopped) ▶

Poll Interval  (in minutes, 0 to disable)

Redirect Internet traffic

Accept DNS configuration

Encryption cipher

Compression

TLS Renegotiation Time  (in seconds, -1 for default)

Connection retry  (in seconds; -1 for infinite)

Verify server certificate (tls-remote)

Custom Configuration

Start Now

Parameter	Instruction
Poll Interval	Openvpn client check router's status as interval time.
Redirect Internet Traffic	Configure Openvpn as default routing.
Access DNS	As the configuration requested.
Encryption	As the configuration requested.
Compression	As the configuration requested.
TLS Renegotiation Time	TLS negotiation time. -1 as default for 60s.
Connection Retry Time	Openvpn retry to connection interval.
Verify server certificate	As the configuration requested.
Custom Configuration	As the configuration requested.

Table 2-13 Advanced of OpenVPN Instruction

The screenshot shows the 'Keys' configuration page for an OpenVPN client. At the top, there are tabs for 'Basic', 'Advanced', 'Keys', and 'Status'. The 'Keys' tab is active. Below the tabs, the status of 'VPN Client #1' is shown as '(Stopped)'. A note indicates that for help generating keys, users should refer to the OpenVPN HOWTO. There are three text input fields: 'Certificate Authority', 'Client Certificate', and 'Client Key'. A 'Start Now' button is located at the bottom left of the configuration area.

Table 2-14 Keys of OpenVPN Instruction

Parameter	Instruction
Certificate Authority	Keep certificate as the same as server
Client Certificate	Keep client certificate as the same as server
Client Key	Keep client key as the same as server

The screenshot shows the 'Status' page for an OpenVPN client. At the top, there are tabs for 'Client 1' and 'Client 2'. Below these are sub-tabs for 'Basic', 'Advanced', 'Keys', and 'Status'. The 'Status' sub-tab is active. The status of 'VPN Client #1' is shown as '(Stopped)'. A message states 'Client is not running or status could not be read.' There is a 'Refresh Status' button on the right side. A 'Start Now' button is located at the bottom left.

Table 2-15 Status of OpenVPN Instruction

Parameter	Instruction
Status	Check Openvpn status and data statistics.

Step 2 Please click "save" to finish.

---End

## PPTP/L2TP Client Setting

Step 1 VPN Tunnel> VPN Client to check or modify the relevant parameter.

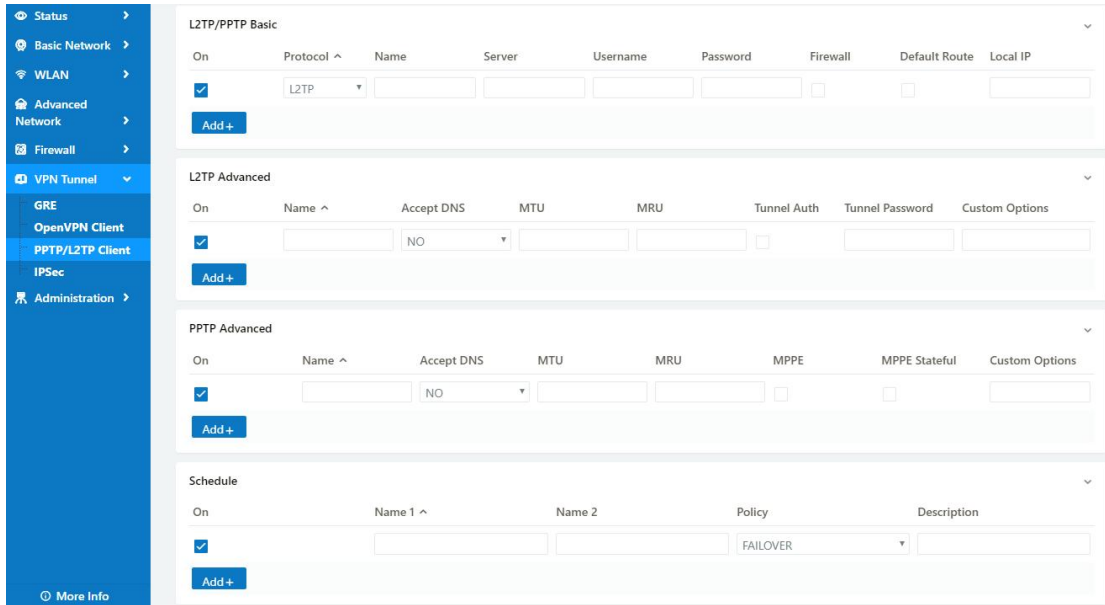


Table 2-16 PPTP/L2TP Basic Instruction

parameter	Instruction
On	VPN enable
Protocol	VPN Mode for PPTP and L2TP
Name	VPN Tunnel name
Server Address	VPN Server IP address.
User name	As the configuration requested.
Password	As the configuration requested.
Firewall	Firewall For VPN Tunnel
Local IP	Defined Local IP address for tunnel

Table 2-17 L2TP Advanced Instruction

On	L2TP Advanced enable
Name	L2TP Tunnel name
Accept DNS	As the configuration requested.
MTU	MTU is 1450bytes as default
MRU	MRU is 1450bytes as default
Tunnel Auth.	L2TP authentication Optional as the configuration requested.
Tunnel Password	As the configuration requested.

Custom Options	As the configuration requested.
----------------	---------------------------------

Table 2-18 PPTP Advanced Instruction

On	PPTP Advanced enable
Name	PPTP Tunnel name
Accept DNS	As the configuration requested.
MTU	MTU is 1450bytes as default
MRU	MRU is 1450bytes as default
MPPE	As the configuration requested
MPPE Stateful	As the configuration requested
Customs	As the configuration requested


Table 2-19 SCHEDULE Instruction

On	VPN SCHEDULE feature enable
Name1	VPN tunnel name
Name2	VPN tunnel name
Policy	Support VPN tunnel backup and failover modes optional
Description	As the configuration requested

Step 2 Please click "save" to finish.

---End

## IPSec Setting

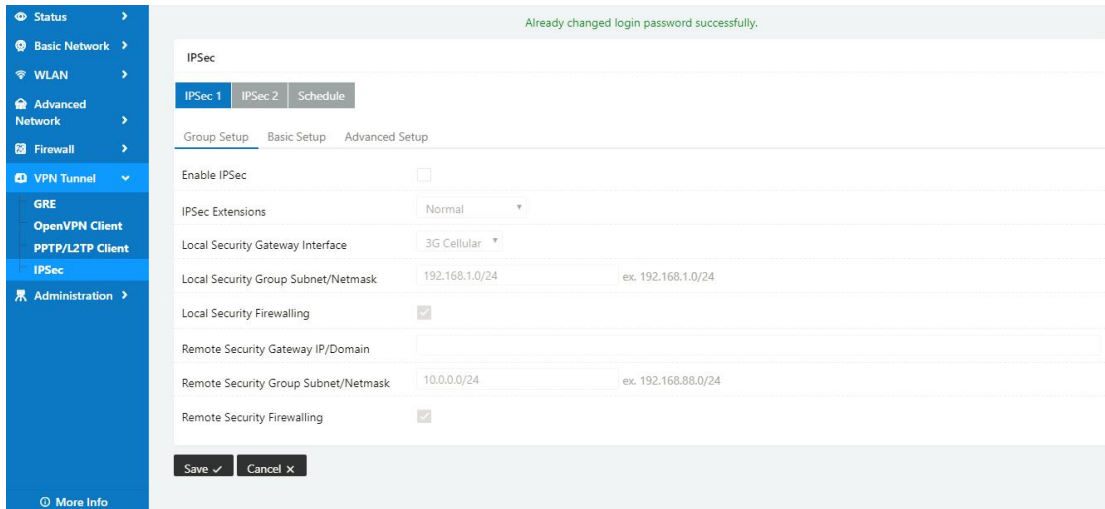

## IPSec Group Setup

Step 1 IPSec> Group Setup to check or modify the relevant parameter.

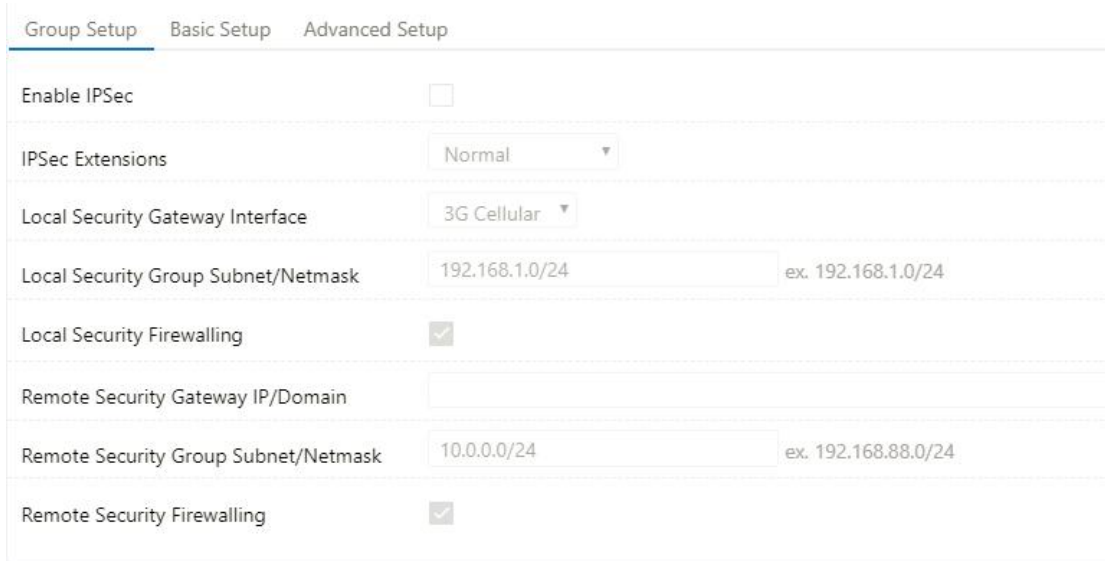


Table 2-20 IPSec Group Setup Instruction

parameter	Instruction
IPSec Extensions	Support Standard IPSec, GRE over IPSec, L2TP over IPSec
Local Security Interface	Defined the IPSec security interface
Local Subnet/Mask	IPSec local subnet and mask.

parameter	Instruction
Local Firewall	Forwarding-firewalling for Local subnet
Remote IP/Domain	IPsec peer IP address/domain name.
Remote Subnet/Mask	IPSec remote subnet and mask.
Remote Firewall	Forwarding-firewalling for Remote subnet

Step 2 Please click "save" to finish.

### IPSec Basic Setup

Step 1 IPSec >Basic Setup to check or modify the relevant parameter.

Group Setup   **Basic Setup**   Advanced Setup

---

Keying Mode: IKE with Preshared Key ▼

---

Phase 1 DH Group: Group 2 - modp1024 ▼

---

Phase 1 Encryption: 3DES (168-bit) ▼

---

Phase 1 Authentication: MD5 HMAC (96-bit) ▼

---

Phase 1 SA Life Time: 28800 seconds

---

Phase 2 DH Group: Group 2 - modp1024 ▼

---

Phase 2 Encryption: 3DES (168-bit) ▼

---

Phase 2 Authentication: MD5 HMAC (96-bit) ▼

---

Phase 2 SA Life Time: 3600 seconds

---

Preshared Key:

Table 2-21 IPSec Basic Setup Instruction

parameter	Instruction
Keying Mode	IKE preshared key
Phase 1 DH Group	Select Group1, Group2, Group5 from list. It must be matched to remote IPSec setting.
Phase 1	Support 3DES, AES-128, AES-192, AES-256

parameter	Instruction
Encryption	
Phase 1 Authentication	Support HASH MD5 and SHA
Phase 1 SA Life Time	IPSec Phase 1 SA lifetime
Phase 2 DH Group	Select Group1, Group2, Group5 from list. It must be matched to remote IPSec setting.
Phase 2 Encryption	Support 3DES, AES-128, AES-192, AES-256
Phase 2 Authentication	Support HASH MD5 and SHA
Phase 2 SA Life Time	IPSec Phase 2 SA lifetime
Preshared Key	Preshared Key

Step 2 Please click "save" to finish.

### IPSec Advanced Setup

Step 1 IPSec >Advanced Setup to check or modify the relevant parameter.

Group Setup   Basic Setup   Advanced Setup

---

Aggressive Mode

---

Compress(IP Payload Compression)

---

Dead Peer Detection(DPD)

---

ICMP Check

---

IPSec Custom Options 1

---

IPSec Custom Options 2

---

IPSec Custom Options 3

---

IPSec Custom Options 4

Table 2-22 IPsec Advanced Setup Instruction

parameter	Instruction
Aggressive Mode	Default for main mode
ID Payload Compress	Enable ID Payload compress
DPD	To enable DPD service
ICMP	ICMP Check for IPsec tunnel
IPsec Custom Options	IPsec advanced setting such as left/right ID.

Step 2 Please click "save" to finish.

**---End**